
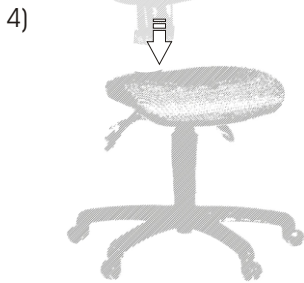
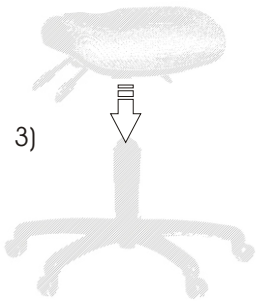
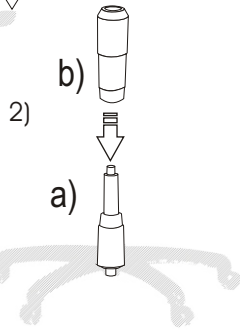


NEO Plus

Chair Assembly

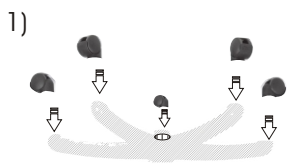

PAGO
DESIGNS

1) Castor and Base assembly

Attach castors to by pushing castor pins into holes in nylon base.

2) Gas Lift with outside Bellow





a) Insert gas lift into chair base location hole. b) Place the three piece telescopic bellow over gas lift ensuring that it is pushed down securely.

3) Chair Seat

Insert completed gas lift and base into mechanism location hole. Apply pressure to the centre of the chair seat and ensure that it is securely located

4) Back to seat assembly

Insert back bellow over connector bar with wider section closest to base of back. Insert completed back assembly into slot of under seat mechanism making sure that the bar goes through the hole in the bottom of the bellow. Insert the plastic plug provided in the hole at the bottom of the bar. Tighten knob to

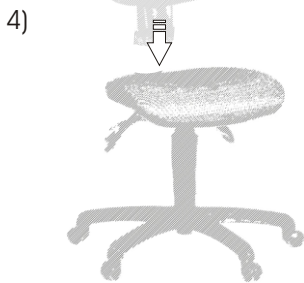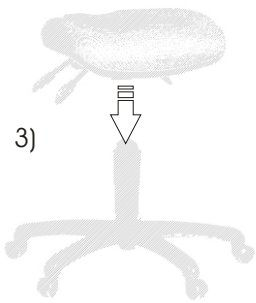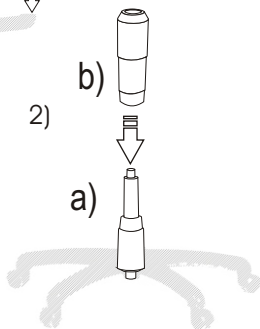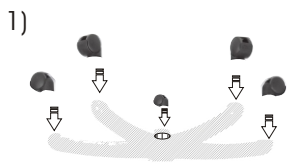

PAGO
DESIGNS

NEO Plus

Chair Assembly

1) Castor and Base assembly

Attach castors to by pushing castor pins into holes in nylon base.

2) Gas Lift with outside Bellow

a) Insert gas lift into chair base location hole. b) Place the three piece telescopic bellow over gas lift ensuring that it is pushed down securely.

3) Chair Seat

Insert completed gas lift and base into mechanism location hole. Apply pressure to the centre of the chair seat and ensure that it is securely located

4) Back to seat assembly

Insert back bellow over connector bar with wider section closest to base of back. Insert completed back assembly into slot of under seat mechanism making sure that the bar goes through the hole in the bottom of the bellow. Insert the plastic plug provided in the hole at the bottom of the bar. Tighten knob to